

Manufacturer: Rexam Healthcare  
Model: Purse-Pak  
ASTM Type: IIA

Description:

This is a two-piece plastic lug-bayonet closure (Figure 1).



Figure 1

The closure is opened by pushing down on the closure and simultaneously turning it counterclockwise. The interior of the closure has 4 square lugs (circled in Figure 2A) that fit into the “L” shaped bayonets on the container neck (shown with arrow Figure 2B) to keep the package closed.

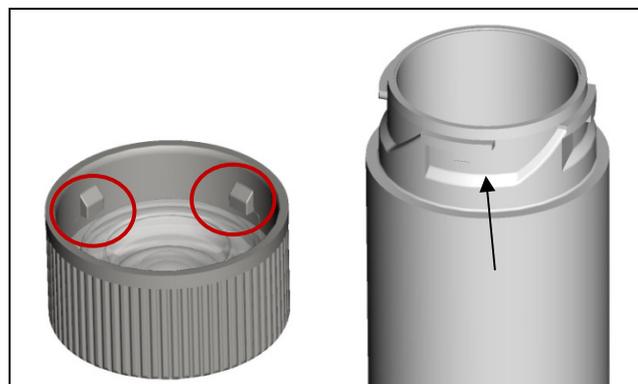


Figure 2A

Figure 2B

The manufacturer's instructions on the closure are (Figure 3):

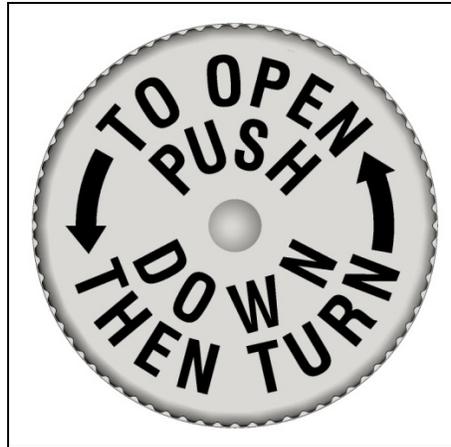


Figure 3

(arrow counterclockwise) TO OPEN

PUSH  
DOWN

THEN TURN (arrow counterclockwise)