

*While we have taken steps to ensure the accuracy of this Internet version of the document, it is not the official version. To see a complete version including any recent edits, visit: <https://www.ecfr.gov/cgi-bin/ECFR?page=browse> and search under Title 40, Protection of Environment.*

## **METHOD 7C - DETERMINATION OF NITROGEN OXIDE EMISSIONS FROM STATIONARY SOURCES (ALKALINE PERMANGANATE/COLORIMETRIC METHOD)**

Note: This method does not include all of the specifications (*e.g.*, equipment and supplies) and procedures (*e.g.*, sampling and analytical) essential to its performance. Some material is incorporated by reference from other methods in this part. Therefore, to obtain reliable results, persons using this method should have a thorough knowledge of at least the following additional test methods: Method 1, Method 3, Method 6 and Method 7.

### *1.0 Scope and Application*

#### 1.1 Analytes.

<b>Analyte</b>	<b>CAS no.</b>	<b>Sensitivity</b>
Nitrogen oxides (NO <sub>x</sub> ), as NO <sub>2</sub> , including:		
Nitric oxide (NO)	10102-43-9	
Nitrogen dioxide (NO <sub>2</sub> )	10102-44-07	ppmv

1.2 Applicability. This method applies to the measurement of NO<sub>x</sub> emissions from fossil-fuel fired steam generators, electric utility plants, nitric acid plants, or other sources as specified in the regulations.

1.3 Data Quality Objectives. Adherence to the requirements of this method will enhance the quality of the data obtained from air pollutant sampling methods.

### *2.0 Summary of Method*

An integrated gas sample is extracted from the stack and passed through impingers containing an alkaline potassium permanganate solution; NO<sub>x</sub> (NO + NO<sub>2</sub>) emissions are oxidized to NO<sub>2</sub> and NO<sub>3</sub>. Then NO<sub>3</sub><sup>-</sup> is reduced to NO<sub>2</sub><sup>-</sup> with cadmium, and the NO<sub>2</sub><sup>-</sup> is analyzed colorimetrically.

### *3.0 Definitions[Reserved]*

### *4.0 Interferences*

Possible interferents are sulfur dioxides (SO<sub>2</sub>) and ammonia (NH<sub>3</sub>).

4.1 High concentrations of SO<sub>2</sub> could interfere because SO<sub>2</sub> consumes MnO<sub>4</sub> (as does NO<sub>x</sub>) and, therefore, could reduce the NO<sub>x</sub> collection efficiency. However, when sampling emissions from a coal-fired electric utility plant burning 2.1 percent sulfur coal with no control of SO<sub>2</sub> emissions, collection efficiency was not reduced. In fact, calculations show that sampling 3000 ppm SO<sub>2</sub> will reduce the MnO<sub>4</sub> concentration by only 5 percent if all the SO<sub>2</sub> is consumed in the first impinger.

4.2 Ammonia (NH<sub>3</sub>) is slowly oxidized to NO<sub>3</sub><sup>-</sup> by the absorbing solution. At 100 ppm NH<sub>3</sub> in the gas stream, an interference of 6 ppm NO<sub>x</sub> (11 mg NO<sub>2</sub>/m<sup>3</sup>) was observed when the sample was analyzed 10 days after collection. Therefore, the method may not be applicable to plants using NH<sub>3</sub> injection to control NO<sub>x</sub> emissions unless means are taken to correct the results. An equation has been developed to allow quantification of the interference and is discussed in Reference 5 of Section 16.0.

### 5.0 Safety

5.1 Disclaimer. This method may involve hazardous materials, operations, and equipment. This test method may not address all of the safety problems associated with its use. It is the responsibility of the user of this test method to establish appropriate safety and health practices and to determine the applicability of regulatory limitations prior to performing this test method.

5.2 Corrosive Reagents. The following reagents are hazardous. Personal protective equipment and safe procedures are useful in preventing chemical splashes. If contact occurs, immediately flush with copious amounts of water for at least 15 minutes. Remove clothing under shower and decontaminate. Treat residual chemical burns as thermal burns.

5.2.1 Hydrochloric Acid (HCl). Highly toxic and corrosive. Causes severe damage to skin. Vapors are highly irritating to eyes, skin, nose, and lungs, causing severe damage. May cause bronchitis, pneumonia, or edema of lungs. Exposure to vapor concentrations of 0.13 to 0.2 percent can be lethal in minutes. Will react with metals, producing hydrogen.

5.2.2 Oxalic Acid (COOH)<sub>2</sub>. Poisonous. Irritating to eyes, skin, nose, and throat.

5.2.3 Sodium Hydroxide (NaOH). Causes severe damage to eye tissues and to skin. Inhalation causes irritation to nose, throat, and lungs. Reacts exothermically with small amounts of water.

5.2.4 Potassium Permanganate (KMnO<sub>4</sub>). Caustic, strong oxidizer. Avoid bodily contact with.

### 6.0 Equipment and Supplies

6.1 Sample Collection and Sample Recovery. A schematic of the Method 7C sampling train is shown in Figure 7C-1, and component parts are discussed below. Alternative apparatus and procedures are allowed provided acceptable accuracy and precision can be demonstrated to the satisfaction of the Administrator.

6.1.1 Probe. Borosilicate glass tubing, sufficiently heated to prevent water condensation and equipped with an in-stack or heated out-of-stack filter to remove particulate matter (a plug of glass wool is satisfactory for this purpose). Stainless steel or Teflon tubing may also be used for the probe.

6.1.2 Impingers. Three restricted-orifice glass impingers, having the specifications given in Figure 7C–2, are required for each sampling train. The impingers must be connected in series with leak-free glass connectors. Stopcock grease may be used, if necessary, to prevent leakage. (The impingers can be fabricated by a glass blower if not available commercially.)

6.1.3 Glass Wool, Stopcock Grease, Drying Tube, Valve, Pump, Barometer, and Vacuum Gauge and Rotameter. Same as in Method 6, Sections 6.1.1.3, 6.1.1.4, 6.1.1.6, 6.1.1.7, 6.1.1.8, 6.1.2, and 6.1.3, respectively.

6.1.4 Rate Meter. Rotameter, or equivalent, accurate to within 2 percent at the selected flow rate of between 400 and 500 ml/min (0.014 to 0.018 cfm). For rotameters, a range of 0 to 1 liter/min (0 to 0.035 cfm) is recommended.

6.1.5 Volume Meter. Dry gas meter (DGM) capable of measuring the sample volume under the sampling conditions of 400 to 500 ml/min (0.014 to 0.018 cfm) for 60 minutes within an accuracy of 2 percent.

6.1.6 Filter. To remove NO<sub>x</sub> from ambient air, prepared by adding 20 g of 5-angstrom molecular sieve to a cylindrical tube (*e.g.*, a polyethylene drying tube).

6.1.7 Polyethylene Bottles. 1-liter, for sample recovery.

6.1.8 Funnel and Stirring Rods. For sample recovery.

6.2 Sample Preparation and Analysis.

6.2.1 Hot Plate. Stirring type with 50- by 10-mm Teflon-coated stirring bars.

6.2.2 Beakers. 400-, 600-, and 1000-ml capacities.

6.2.3 Filtering Flask. 500-ml capacity with side arm.

6.2.4 Buchner Funnel. 75-mm ID, with spout equipped with a 13-mm ID by 90-mm long piece of Teflon tubing to minimize possibility of aspirating sample solution during filtration.

6.2.5 Filter Paper. Whatman GF/C, 7.0-cm diameter.

6.2.6 Stirring Rods.

6.2.7 Volumetric Flasks. 100-, 200- or 250-, 500-, and 1000-ml capacity.

6.2.8 Watch Glasses. To cover 600- and 1000-ml beakers.

6.2.9 Graduated Cylinders. 50- and 250-ml capacities.

6.2.10 Pipettes. Class A.

6.2.11 pH Meter. To measure pH from 0.5 to 12.0.

6.2.12 Burette. 50-ml with a micrometer type stopcock. (The stopcock is Catalog No. 8225-t-05, Ace Glass, Inc., Post Office Box 996, Louisville, Kentucky 50201.) Place a glass wool plug in bottom of burette. Cut off burette at a height of 43 cm (17 in.) from the top of plug, and have a blower attach a glass funnel to top of burette such that the diameter of the burette remains essentially unchanged. Other means of attaching the funnel are acceptable.

6.2.13 Glass Funnel. 75-mm ID at the top.

6.2.14 Spectrophotometer. Capable of measuring absorbance at 540 nm; 1-cm cells are adequate.

6.2.15 Metal Thermometers. Bimetallic thermometers, range 0 to 150°C (32 to 300°F).

6.2.16 Culture Tubes. 20-by 150-mm, Kimax No. 45048.

6.2.17 Parafilm "M." Obtained from American Can Company, Greenwich, Connecticut 06830.

6.2.18 CO<sub>2</sub> Measurement Equipment. Same as in Method 3, Section 6.0.

### *7.0 Reagents and Standards*

Unless otherwise indicated, it is intended that all reagents conform to the specifications established by the Committee on Analytical Reagents of the American Chemical Society, where such specifications are available; otherwise, use the best available grade.

#### 7.1 Sample Collection.

7.1.1 Water. Deionized distilled to conform to ASTM Specification D 1193-77 or 91 Type 3 (incorporated by reference—see §60.17).

7.1.2 Potassium Permanganate, 4.0 Percent (w/w), Sodium Hydroxide, 2.0 Percent (w/w) solution (KMnO<sub>4</sub>/NaOH solution). Dissolve 40.0 g of KMnO<sub>4</sub> and 20.0 g of NaOH in 940 ml of water.

#### 7.2 Sample Preparation and Analysis.

7.2.1 Water. Same as in Section 7.1.1.

7.2.2 Oxalic Acid Solution. Dissolve 48 g of oxalic acid  $[(\text{COOH})_2 \cdot 2\text{H}_2\text{O}]$  in water, and dilute to 500 ml. Do not heat the solution.

7.2.3 Sodium Hydroxide, 0.5 N. Dissolve 20 g of NaOH in water, and dilute to 1 liter.

7.2.4 Sodium Hydroxide, 10 N. Dissolve 40 g of NaOH in water, and dilute to 100 ml.

7.2.5 Ethylenediamine Tetraacetic Acid (EDTA) Solution, 6.5 percent (w/v). Dissolve 6.5 g of EDTA (disodium salt) in water, and dilute to 100 ml. Dissolution is best accomplished by using a magnetic stirrer.

7.2.6 Column Rinse Solution. Add 20 ml of 6.5 percent EDTA solution to 960 ml of water, and adjust the pH to between 11.7 and 12.0 with 0.5 N NaOH.

7.2.7 Hydrochloric Acid (HCl), 2 N. Add 86 ml of concentrated HCl to a 500 ml-volumetric flask containing water, dilute to volume, and mix well. Store in a glass-stoppered bottle.

7.2.8 Sulfanilamide Solution. Add 20 g of sulfanilamide (melting point 165 to 167°C (329 to 333°F)) to 700 ml of water. Add, with mixing, 50 ml concentrated phosphoric acid (85 percent), and dilute to 1000 ml. This solution is stable for at least 1 month, if refrigerated.

7.2.9 N-(1-Naphthyl)-Ethylenediamine Dihydrochloride (NEDA) Solution. Dissolve 0.5 g of NEDA in 500 ml of water. An aqueous solution should have one absorption peak at 320 nm over the range of 260 to 400 nm. NEDA that shows more than one absorption peak over this range is impure and should not be used. This solution is stable for at least 1 month if protected from light and refrigerated.

7.2.10 Cadmium. Obtained from Matheson Coleman and Bell, 2909 Highland Avenue, Norwood, Ohio 45212, as EM Laboratories Catalog No. 2001. Prepare by rinsing in 2 N HCl for 5 minutes until the color is silver-grey. Then rinse the cadmium with water until the rinsings are neutral when tested with pH paper. CAUTION:  $\text{H}_2$  is liberated during preparation. Prepare in an exhaust hood away from any flame or combustion source.

7.2.11 Sodium Sulfite ( $\text{NaNO}_2$ ) Standard Solution, Nominal Concentration, 1000  $\mu\text{g NO}_2^-/\text{ml}$ . Desiccate  $\text{NaNO}_2$  overnight. Accurately weigh 1.4 to 1.6 g of  $\text{NaNO}_2$  (assay of 97 percent  $\text{NaNO}_2$  or greater), dissolve in water, and dilute to 1 liter. Calculate the exact  $\text{NO}_2^-$  concentration using Equation 7C-1 in Section 12.2. This solution is stable for at least 6 months under laboratory conditions.

7.2.12 Potassium Nitrate ( $\text{KNO}_3$ ) Standard Solution. Dry  $\text{KNO}_3$  at 110°C (230°F) for 2 hours, and cool in a desiccator. Accurately weigh 9 to 10 g of  $\text{KNO}_3$  to within 0.1 mg, dissolve in water, and dilute to 1 liter. Calculate the exact  $\text{NO}_3^-$  concentration using Equation 7C-2 in Section 12.3. This solution is stable for 2 months without preservative under laboratory conditions.

7.2.13 Spiking Solution. Pipette 7 ml of the  $\text{KNO}_3$  standard into a 100-ml volumetric flask, and dilute to volume.

7.2.14 Blank Solution. Dissolve 2.4 g of  $\text{KMnO}_4$  and 1.2 g of NaOH in 96 ml of water. Alternatively, dilute 60 ml of  $\text{KMnO}_4/\text{NaOH}$  solution to 100 ml.

### 8.0 Sample Collection, Preservation, Storage, and Transport

8.1 Preparation of Sampling Train. Add 200 ml of  $\text{KMnO}_4/\text{NaOH}$  solution (Section 7.1.2) to each of three impingers, and assemble the train as shown in Figure 7C–1. Adjust the probe heater to a temperature sufficient to prevent water condensation.

8.2 Leak-Checks. Same as in Method 6, Section 8.2.

### 8.3 Sample Collection.

8.3.1 Record the initial DGM reading and barometric pressure. Determine the sampling point or points according to the appropriate regulations (*e.g.*, §60.46(b)(5) of 40 CFR Part 60). Position the tip of the probe at the sampling point, connect the probe to the first impinger, and start the pump. Adjust the sample flow to a value between 400 and 500 ml/min (0.014 and 0.018 cfm). **CAUTION: DO NOT EXCEED THESE FLOW RATES.** Once adjusted, maintain a constant flow rate during the entire sampling run. Sample for 60 minutes. For relative accuracy (RA) testing of continuous emission monitors, the minimum sampling time is 1 hour, sampling 20 minutes at each traverse point.

Note: When the  $\text{SO}_2$  concentration is greater than 1200 ppm, the sampling time may have to be reduced to 30 minutes to eliminate plugging of the impinger orifice with  $\text{MnO}_2$ . For RA tests with  $\text{SO}_2$  greater than 1200 ppm, sample for 30 minutes (10 minutes at each point).

8.3.2 Record the DGM temperature, and check the flow rate at least every 5 minutes. At the conclusion of each run, turn off the pump, remove the probe from the stack, and record the final readings. Divide the sample volume by the sampling time to determine the average flow rate. Conduct the mandatory post-test leak-check. If a leak is found, void the test run, or use procedures acceptable to the Administrator to adjust the sample volume for the leakage.

8.4  $\text{CO}_2$  Measurement. During sampling, measure the  $\text{CO}_2$  content of the stack gas near the sampling point using Method 3. The single-point grab sampling procedure is adequate, provided the measurements are made at least three times (near the start, midway, and before the end of a run), and the average  $\text{CO}_2$  concentration is computed. The Orsat or Fyrite analyzer may be used for this analysis.

8.5 Sample Recovery. Disconnect the impingers. Pour the contents of the impingers into a 1-liter polyethylene bottle using a funnel and a stirring rod (or other means) to prevent spillage. Complete the quantitative transfer by rinsing the impingers and connecting tubes with water until the rinsings are clear to light pink, and add the rinsings to the bottle. Mix the sample, and mark the solution level. Seal and identify the sample container.

### 9.0 Quality Control

Section	Quality control measure	Effect
8.2, 10.1–10.3	Sampling equipment leak-check and calibration	Ensure accurate measurement of sample volume.
10.4	Spectrophotometer calibration	Ensure linearity of spectrophotometer response to standards
11.3	Spiked sample analysis.	Ensure reduction efficiency of column.

### 10.0 Calibration and Standardizations

10.1 Volume Metering System. Same as Method 6, Section 10.1. For detailed instructions on carrying out these calibrations, it is suggested that Section 3.5.2 of Reference 4 of Section 16.0 be consulted.

10.2 Temperature Sensors and Barometer. Same as in Method 6, Sections 10.2 and 10.4, respectively.

10.3 Check of Rate Meter Calibration Accuracy (Optional). Disconnect the probe from the first impinger, and connect the filter. Start the pump, and adjust the rate meter to read between 400 and 500 ml/min (0.014 and 0.018 cfm). After the flow rate has stabilized, start measuring the volume sampled, as recorded by the dry gas meter and the sampling time. Collect enough volume to measure accurately the flow rate. Then calculate the flow rate. This average flow rate must be less than 500 ml/min (0.018 cfm) for the sample to be valid; therefore, it is recommended that the flow rate be checked as above prior to each test.

#### 10.4 Spectrophotometer.

10.4.1 Dilute 5.0 ml of the  $\text{NaNO}_2$  standard solution to 200 ml with water. This solution nominally contains  $25 \mu\text{g NO}_2^-/\text{ml}$ . Use this solution to prepare calibration standards to cover the range of 0.25 to  $3.00 \mu\text{g NO}_2^-/\text{ml}$ . Prepare a minimum of three standards each for the linear and slightly nonlinear (described below) range of the curve. Use pipettes for all additions.

10.4.2 Measure the absorbance of the standards and a water blank as instructed in Section 11.5. Plot the net absorbance vs.  $\mu\text{g NO}_2^-/\text{ml}$ . Draw a smooth curve through the points. The curve should be linear up to an absorbance of approximately 1.2 with a slope of approximately 0.53 absorbance units/ $\mu\text{g NO}_2^-/\text{ml}$ . The curve should pass through the origin. The curve is slightly nonlinear from an absorbance of 1.2 to 1.6.

### 11.0 Analytical Procedures

11.1 Sample Stability. Collected samples are stable for at least four weeks; thus, analysis must occur within 4 weeks of collection.

11.2 Sample Preparation.

11.2.1 Prepare a cadmium reduction column as follows: Fill the burette with water. Add freshly prepared cadmium slowly, with tapping, until no further settling occurs. The height of the cadmium column should be 39 cm (15 in). When not in use, store the column under rinse solution.

Note: The column should not contain any bands of cadmium fines. This may occur if regenerated cadmium is used and will greatly reduce the column lifetime.

11.2.2 Note the level of liquid in the sample container, and determine whether any sample was lost during shipment. If a noticeable amount of leakage has occurred, the volume lost can be determined from the difference between initial and final solution levels, and this value can then be used to correct the analytical result. Quantitatively transfer the contents to a 1-liter volumetric flask, and dilute to volume.

11.2.3 Take a 100-ml aliquot of the sample and blank (unexposed  $\text{KMnO}_4/\text{NaOH}$ ) solutions, and transfer to 400-ml beakers containing magnetic stirring bars. Using a pH meter, add concentrated  $\text{H}_2\text{SO}_4$  with stirring until a pH of 0.7 is obtained. Allow the solutions to stand for 15 minutes. Cover the beakers with watch glasses, and bring the temperature of the solutions to  $50^\circ\text{C}$  ( $122^\circ\text{F}$ ). Keep the temperature below  $60^\circ\text{C}$  ( $140^\circ\text{F}$ ). Dissolve 4.8 g of oxalic acid in a minimum volume of water, approximately 50 ml, at room temperature. Do not heat the solution. Add this solution slowly, in increments, until the  $\text{KMnO}_4$  solution becomes colorless. If the color is not completely removed, prepare some more of the above oxalic acid solution, and add until a colorless solution is obtained. Add an excess of oxalic acid by dissolving 1.6 g of oxalic acid in 50 ml of water, and add 6 ml of this solution to the colorless solution. If suspended matter is present, add concentrated  $\text{H}_2\text{SO}_4$  until a clear solution is obtained.

11.2.4 Allow the samples to cool to near room temperature, being sure that the samples are still clear. Adjust the pH to between 11.7 and 12.0 with 10 N NaOH. Quantitatively transfer the mixture to a Buchner funnel containing GF/C filter paper, and filter the precipitate. Filter the mixture into a 500-ml filtering flask. Wash the solid material four times with water. When filtration is complete, wash the Teflon tubing, quantitatively transfer the filtrate to a 500-ml volumetric flask, and dilute to volume. The samples are now ready for cadmium reduction. Pipette a 50-ml aliquot of the sample into a 150-ml beaker, and add a magnetic stirring bar. Pipette in 1.0 ml of 6.5 percent EDTA solution, and mix.

11.3 Determine the correct stopcock setting to establish a flow rate of 7 to 9 ml/min of column rinse solution through the cadmium reduction column. Use a 50-ml graduated cylinder to collect and measure the solution volume. After the last of the rinse solution has passed from the funnel into the burette, but before air entrapment can occur, start adding the sample, and collect it in a 250-ml graduated cylinder. Complete the quantitative transfer of the sample to the column as the sample passes through the column. After the last of the sample has passed from the funnel into the burette, start adding 60 ml of column rinse solution, and collect the rinse solution until the solution just disappears from the funnel. Quantitatively transfer the sample to a 200-ml volumetric flask (a 250-ml flask may be required), and dilute to volume. The samples are now ready for  $\text{NO}_2^-$  analysis.



Note: Two spiked samples should be run with every group of samples passed through the column. To do this, prepare two additional 50-ml aliquots of the sample suspected to have the highest  $\text{NO}_2^-$  concentration, and add 1 ml of the spiking solution to these aliquots. If the spike recovery or column efficiency (see Section 12.2) is below 95 percent, prepare a new column, and repeat the cadmium reduction.

11.5 Sample Analysis. Pipette 10 ml of sample into a culture tube. Pipette in 10 ml of sulfanilamide solution and 1.4 ml of NEDA solution. Cover the culture tube with parafilm, and mix the solution. Prepare a blank in the same manner using the sample from treatment of the unexposed  $\text{KMnO}_4/\text{NaOH}$  solution. Also, prepare a calibration standard to check the slope of the calibration curve. After a 10-minute color development interval, measure the absorbance at 540 nm against water. Read  $\mu\text{g NO}_2^-/\text{ml}$  from the calibration curve. If the absorbance is greater than that of the highest calibration standard, use less than 10 ml of sample, and repeat the analysis. Determine the  $\text{NO}_2^-$  concentration using the calibration curve obtained in Section 10.4.

Note: Some test tubes give a high blank  $\text{NO}_2^-$  value but culture tubes do not.

11.6 Audit Sample Analysis. Same as in Method 7, Section 11.4.

### 12.0 Data Analysis and Calculations

Carry out calculations, retaining at least one extra significant figure beyond that of the acquired data. Round off figures after final calculation.

12.1 Nomenclature.

B = Analysis of blank,  $\mu\text{g NO}_2^-/\text{ml}$ .

C = Concentration of  $\text{NO}_x$  as  $\text{NO}_2$ , dry basis,  $\text{mg/dsm}^3$ .

E = Column efficiency, dimensionless

$K_2 = 10^{-3}\text{mg}/\mu\text{g}$ .

m = Mass of  $\text{NO}_x$ , as  $\text{NO}_2$ , in sample,  $\mu\text{g}$ .

$P_{\text{bar}}$  = Barometric pressure, mm Hg (in. Hg).

$P_{\text{std}}$  = Standard absolute pressure, 760 mm Hg (29.92 in. Hg).

s = Concentration of spiking solution,  $\mu\text{g NO}_3/\text{ml}$ .

S = Analysis of sample,  $\mu\text{g NO}_2^-/\text{ml}$ .

$T_m$  = Average dry gas meter absolute temperature,  $^{\circ}\text{K}$ .

$T_{std}$  = Standard absolute temperature, 293°K (528°R).

$V_m(std)$  = Dry gas volume measured by the dry gas meter, corrected to standard conditions, dscm (dscf).

$V_m$  = Dry gas volume as measured by the dry gas meter, scm (scf).

$x$  = Analysis of spiked sample,  $\mu\text{g NO}_2^-/\text{ml}$ .

$X$  = Correction factor for  $\text{CO}_2$  collection =  $100/(100 - \% \text{CO}_2(\text{V/V}))$ .

$y$  = Analysis of unspiked sample,  $\mu\text{g NO}_2^-/\text{ml}$ .

$Y$  = Dry gas meter calibration factor.

1.0 ppm NO = 1.247 mg NO/ $\text{m}^3$  at STP.

1.0 ppm  $\text{NO}_2$  = 1.912 mg  $\text{NO}_2/\text{m}^3$  at STP.

1  $\text{ft}^3 = 2.832 \times 10^{-2} \text{m}^3$ .

12.2  $\text{NO}_2$  Concentration. Calculate the  $\text{NO}_2$  concentration of the solution (see Section 7.2.11) using the following equation:

$$\frac{\mu\text{g NO}_2^-}{\text{ml}} = \text{g NaNO}_2 \times \frac{\text{purity, \%}}{100} \times 10^3 \times \frac{46.01}{69.01} \quad \text{Eq. 7C-1}$$

12.3  $\text{NO}_3$  Concentration. Calculate the  $\text{NO}_3$  concentration of the  $\text{KNO}_3$  solution (see Section 7.2.12) using the following equation:

$$\frac{\mu\text{g NO}_3^-}{\text{ml}} = \text{g KNO}_3 \times (10^3) \times \frac{62.01}{101.10} \quad \text{Eq. 7C-2}$$

12.4 Sample Volume, Dry Basis, Corrected to Standard Conditions.

$$\begin{aligned} V_{m(std)} &= V_m X Y \frac{T_{std}}{T_m} \frac{P_{bar}}{P_{std}} \quad \text{Eq. 7C-3} \\ &= K_1 X Y V_m \frac{P_{bar}}{T_m} \end{aligned}$$

Where:

$K_1 = 0.3855 \text{ } ^\circ\text{K/mm Hg}$  for metric units.

$K_1 = 17.65$  °R/in. Hg for English units.

12.5 Efficiency of Cadmium Reduction Column. Calculate this value as follows:

$$E = \frac{200(x-y)}{1.0s \frac{46.01}{62.01}} = \frac{269.6(x-y)}{s} \quad \text{Eq. 7C-4}$$

Where:

200 = Final volume of sample and blank after passing through the column, ml.

1.0 = Volume of spiking solution added, ml.

46.01 =  $\mu\text{g NO}_2^-/\mu\text{mole}$ .

62.01 =  $\mu\text{g NO}_3^-/\mu\text{mole}$ .

12.6 Total  $\mu\text{g NO}_2$ .

$$m = 200 \left( \frac{500}{50} \right) \left( \frac{1000}{100} \right) \left( \frac{(S-B)}{E} \right) = \frac{(2 \times 10^4)(S-B)}{E} \quad \text{Eq. 7C-5}$$

Where:

500 = Total volume of prepared sample, ml.

50 = Aliquot of prepared sample processed through cadmium column, ml.

100 = Aliquot of  $\text{KMnO}_4/\text{NaOH}$  solution, ml.

1000 = Total volume of  $\text{KMnO}_4/\text{NaOH}$  solution, ml.

12.7 Sample Concentration.

$$C = K_2 \frac{m}{V_{m(\text{std})}} \quad \text{Eq. 7C-6}$$

### 13.0 Method Performance

13.1 Precision. The intra-laboratory relative standard deviation for a single measurement is 2.8 and 2.9 percent at 201 and 268 ppm  $\text{NO}_x$ , respectively.

13.2 Bias. The method does not exhibit any bias relative to Method 7.

13.3 Range. The lower detectable limit is 13 mg NO<sub>x</sub>/m<sup>3</sup>, as NO<sub>2</sub>(7 ppm NO<sub>x</sub>) when sampling at 500 ml/min for 1 hour. No upper limit has been established; however, when using the recommended sampling conditions, the method has been found to collect NO<sub>x</sub> emissions quantitatively up to 1782 mg NO<sub>x</sub>/m<sup>3</sup>, as NO<sub>2</sub> (932 ppm NO<sub>x</sub>).

*14.0 Pollution Prevention[Reserved]*

*15.0 Waste Management[Reserved]*

*16.0 References*

1. Margeson, J.H., W.J. Mitchell, J.C. Suggs, and M.R. Midgett. Integrated Sampling and Analysis Methods for Determining NO<sub>x</sub> Emissions at Electric Utility Plants. U.S. Environmental Protection Agency, Research Triangle Park, NC. Journal of the Air Pollution Control Association. 32 :1210–1215. 1982.
2. Memorandum and attachment from J.H. Margeson, Source Branch, Quality Assurance Division, Environmental Monitoring Systems Laboratory, to The Record, EPA. March 30, 1983. NH<sub>3</sub>Interference in Methods 7C and 7D.
3. Margeson, J.H., J.C. Suggs, and M.R. Midgett. Reduction of Nitrate to Nitrite with Cadmium. Anal. Chem. 52 :1955–57. 1980.
4. Quality Assurance Handbook for Air Pollution Measurement Systems. Volume III—Stationary Source Specific Methods. U.S. Environmental Protection Agency. Research Triangle Park, NC. Publication No. EPA–600/4–77–027b. August 1977.
5. Margeson, J.H., *et al.* An Integrated Method for Determining NO<sub>x</sub> Emissions at Nitric Acid Plants. Analytical Chemistry. 47 (11):1801. 1975.

*17.0 Tables, Diagrams, Flowcharts, and Validation Data*

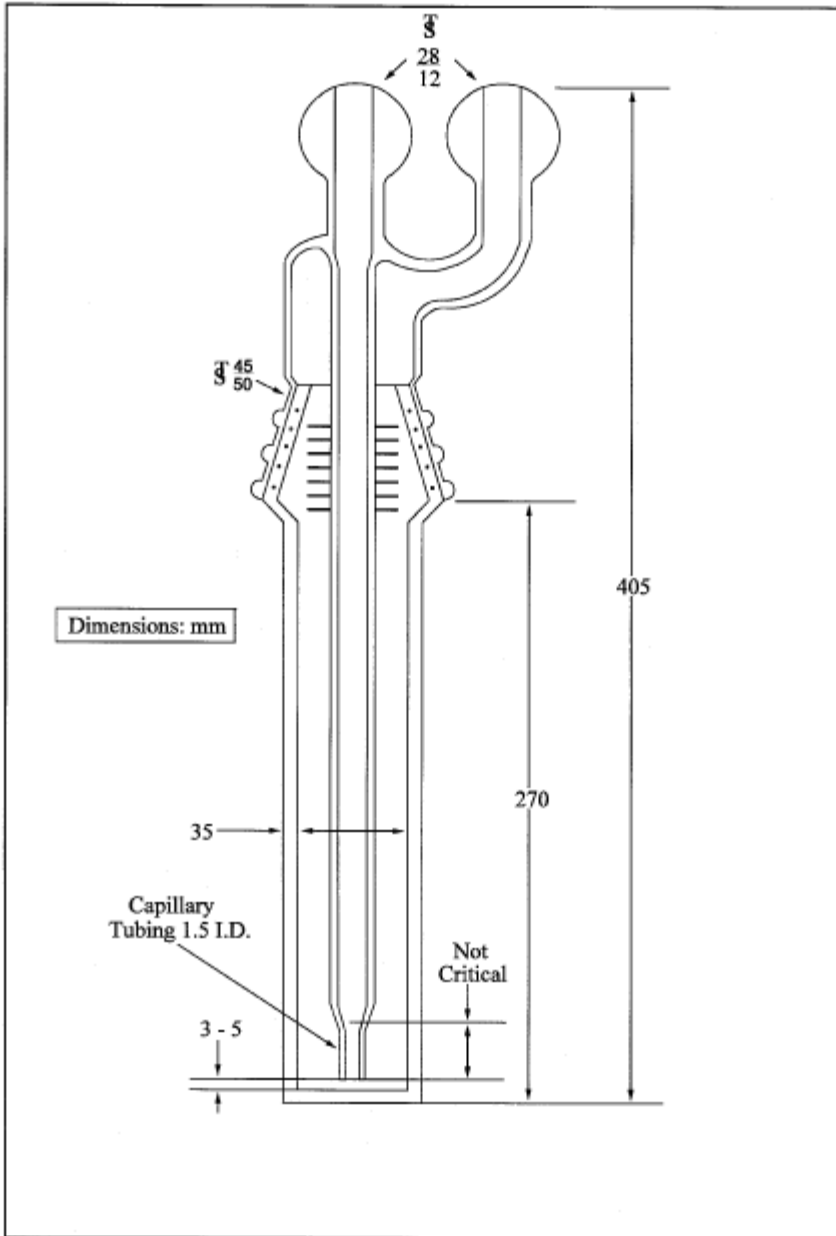


Figure 7C-2. Restricted-Orifice Impinger.